


dampened with a solution of water and a mild detergent. Do not use products that contain solvents, abrasives or caustic agents for cleaning, as they can cause damage to both hardware, cables and connectors.

11. DMX channel list

Configuring DMX is described.

Channel	Value	Function
4 CH		
1	0-255	Pan range -180 > 180
2	0-255	Pan fine (1ch<255)
3	0-5	Rotating (Off)
	6-130 131-255	- fast>slow Slow>fast
4	0-128	None function
	129-255	Reset

12. Control menu

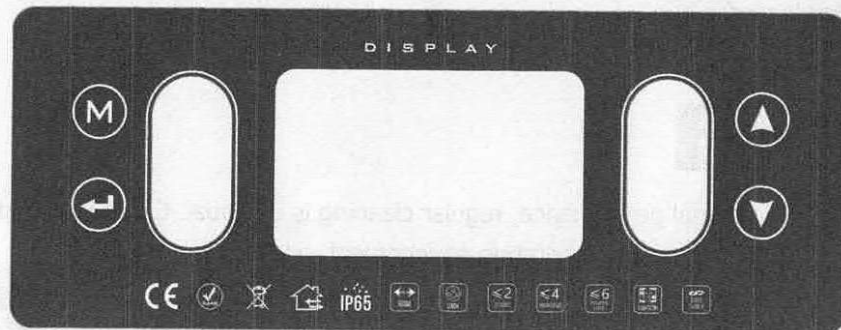

Display:

- MENU** To select the programming functions
- DOWN** To go backward in the selected functions
- UP** To go forward in the selected functions
- ENTER** To confirm the selected functions

User Menu function chart

Level 1	Level 2	Description
Address	001-512	DMX address setting
Ctrl Mode	DMX_CH4	4 channels mode
	Auto 1	0-255 pan auto
Adjust	Motor	0-255 pan range 360

13. Specification

Power supply: 100-240V - 50/60Hz

Power consumption: 100W

Rotation range: Infinite

Rotation mode: Index, Rotation

Rotating fine: Yes

Magnet code: Yes

Positioning means: Yes

Correct misalignment: Yes

DMX mode: 4 CH