


7.LED display

The digital display like below:

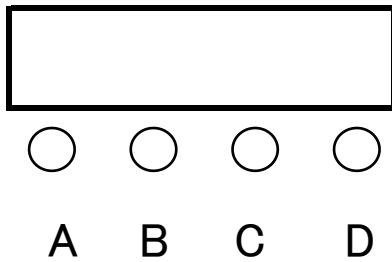

A: MENU
 B: UP
 C: DOWN
 D: ENTER

No	LED display	function
1	A001	8ch DMX address
2	d001	4ch DMX address
3	CC00	Color Jump change
4	CP00	Color change
5	dE00	Color Pulse change
6	SoUd	Sound mode
7	r255	Red
8	G255	Green
9	b255	Blue
10	o255	White

8.Channel table

4 Channel Mode

Channel	Value	Fanction
CH1	0~255	Red
CH2	0~255	Green
CH3	0~255	Blue
CH4	0~255	White

8 Channel Mode

Channel	Value	Fanction
CH1	0~255	Dimmer
CH2	0~255	Red
CH3	0~255	Green
CH4	0~255	Blue
CH5	0~255	White
CH6	0~255	Strobe slow-fast
CH7	0~255	0-5: no effect 6-50: Color change F.I F.O 51-100: Color change gradually 101-150: Color change F.I F.O 151-200: Color change gradually 201-255: Sound activate
CH8	0~255	Speed